# B8141

### LED HIGH BAY LIGHT

# Instruction Manual

#### WARRANTY

- 2-year warranty replacement warranty will be provided during the warranty period if the lamp suffers quality problems.
- During the warranty period, the customer shall return the damaged goods or failed parts for inspection and repair by the manufacturer. The manufacturer will then send the fixed or new
- 3. A replacement warranty will be provided once valid A replacement warranty will be provided once valid documents are presented.

## The following circumstances will not receive replacement

- Damage caused, including, but not limited to, damage from abnormal working conditions, improper usage, storage that does not conform to the instruction manual
- ② Dismantling, modification or improper installation or repairing of the products without the manufacturer's authorization;
- Damages caused by environmental circumstances including, but not limited to, fire, flood, lighting strike, earthquake.



### WARNING

#### To avoid the risk of fire, explosion, or electric shock

This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes.

- \* Verify power wire is by following per under applicable electrical
- & The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- & The external flexible cable or cord of this luminaire cannot be replaced: if the cord is damaged, the luminaire shall be destroyed.

#### To avoid electric shock:

- Be certain electrical power is OFF before and during installation and maintenance.
- · Luminaires must be supplied by a wiring system suitable per local code with an equipment grounding conductor.

#### To avoid burning hands:

· Before to performing maintenance, ensure Luminaire is allowed to cool after poweing off for a period of 30 minutes.

#### To avoid product degradation:


- · Do not operate in ambient temperatures above those indicated on the luminaire date sheet.
- · Use proper supply wiring as specified on the luminaire date sheet
- · Avoid use in environments containing sulfur, chlorine or other halides, methyl acetate or ethyl acetate, cyanoacrylates, glycol ethers, formaldehyde, or butadiene
- · Mount luminaire no less than 36 inches from the ceiling.
- · Make sure the supply voltage is within the voltage range stated on the date sheet.
- · Use only replacement parts from us.
- · Aircraft cable mounting is recommended for dry locations only.
- · Use only our company or equivalent parts for mounting




### **MOUNTING**

#### PENDANT EYEBOLT MOUNTING

Thread the enclosed eyebolt hook into the top of the luminaire housing, and tighten securely. Tighten the set screw to prevent the eyebolt from loosening.

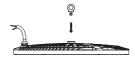

Use a chain, cable, mounting hook, or other mounting hardware to suspend the luminaire. Make sure the mounting hardware is securely attached to a stationary structure and strong enough to safely be attached to a stationary structure and strong enough to safely suspend the luminaire.

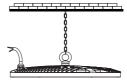


Refer to the Wiring Diagram to make electrical connections.

#### CEILING MOUNTING:

#### STEP 1


Install the fixings of the ceiling mounting bracket to the back of the lamp, then connect the ceiling mounting bracket with the mounting bracket fixing parts.



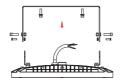


#### STEP 2

Using the yoke mount bracket as a template, mark and drill holes in the ceiling or other solid structure to which the luminaire will be attached.

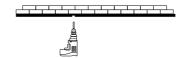


#### STEP 3


Fix the lamp mounting bracket to the mounting surface with bolts and nuts.

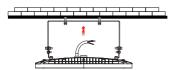

#### STEP 4

If the luminaire will be installed at an angle, tighten the mounting bracket adjustment bolts only partially tight. Otherwise, securely tighten these bolts.

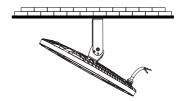

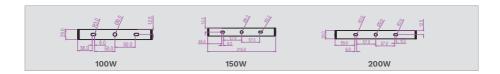

### REFER TO THE WIRING DIAGRAM TO MAKE ELECTRICAL CONNECTIONS

