




BFL-WIFI-10W-20W-30W-50W-RGBCCT-N FLOOD LIGHT

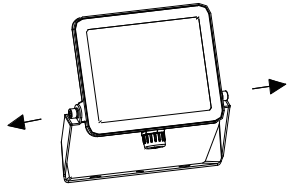


1. Loosen the bracket screws.

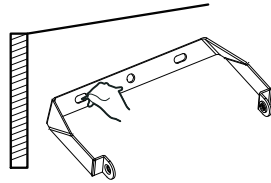


2. Determine the installation location.

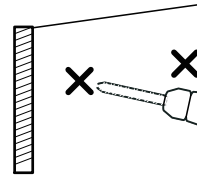


3. Drill holes into the building surface using a hammer drill.

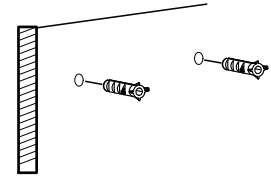


4. Insert expansion bolts.

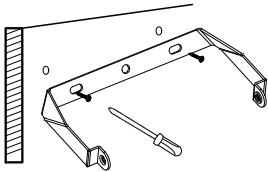

5. Secure the bracket with screws.

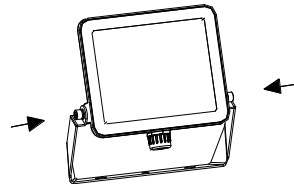

6. Install the floodlight housing, adjust the angle, then tighten the bracket screws to complete installation.

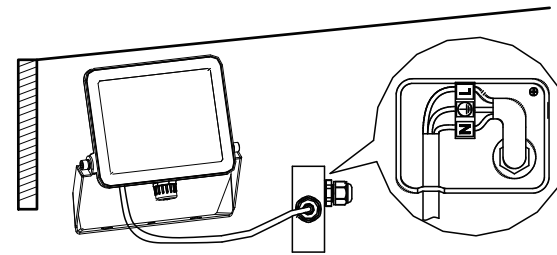

7. Connect wiring: Brown ("L") for live wire, blue for neutral ("N"), yellow-green for ground. After connection, insulate and waterproof with electrical tape and waterproof tape. Use a professional waterproof junction box.