


PARTS THAT MAKE UP THE DISPLAY

Metal structure for the screen. 1 UNIT

Front Panel


Back Panel

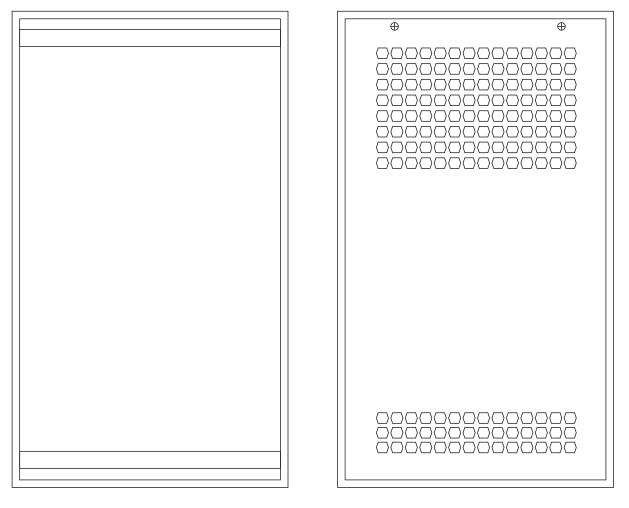

Metal structure support for the screen. 1 UNIT





Metal floor base. 1 UNIT Front Panel

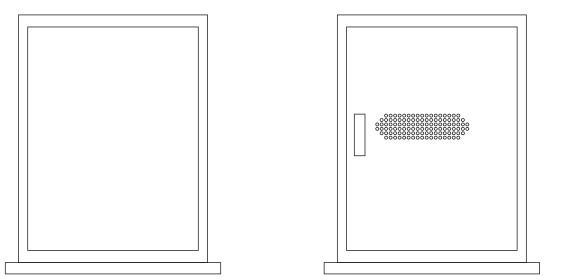

Back Panel

4K Screen with Android Operating System. 1 UNIT Front Panel Back Panel

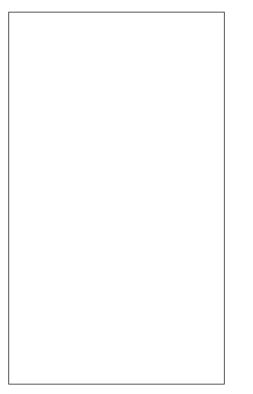

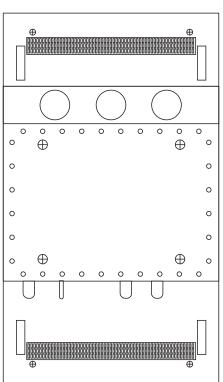



Power cable. 1 UNIT

RJ45 data cable. 1 UNIT

HDMI Cable 1 UNIT

WiFi antenna. 1 UNIT

Floor anchoring screws. 8 UNITS

Support anchoring screws to the floor base. 8 UNITS

Screws for anchoring the screen structure to the base. 8 UNITS

Floor anchoring plugs. 8 UNITS

Screen structure plugs. 8 UNITS

Access door keys. 2 UNITS


Remote control. 1 UNIT




INSTALLATION STEPS

1. Before installing the totem, ensure that the electrical and data cable connections are prepared in the designated area.

2. Anchor the base to the floor using the 8 expansion screws provided. The floor must be solid and level.

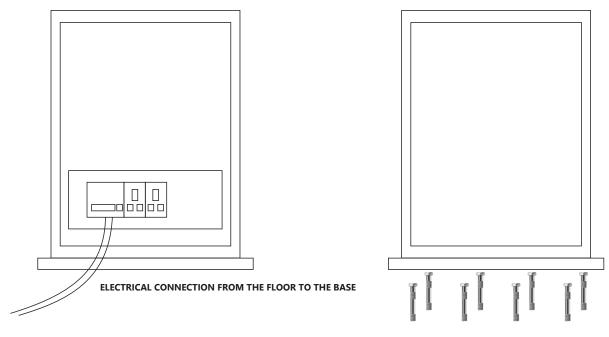



3. Anchor the metal structure support to the base using the 8 screws provided.

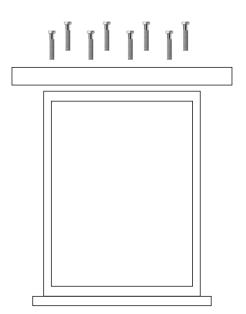




4. Remove the rear cover of the metal structure where the screen will be placed. Unscrew the two screws located at the top, then slide the cover upwards to detach it.

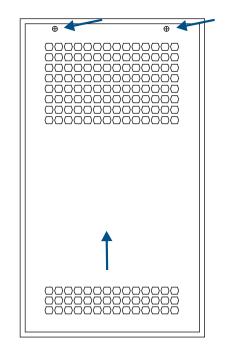

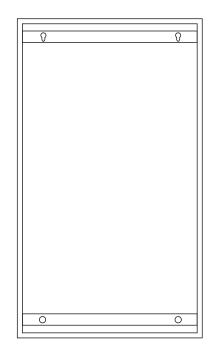


5. After removing the cover from the structure where the screen will be placed, anchor the structure to the base fixed to the floor using the 8 screws provided.

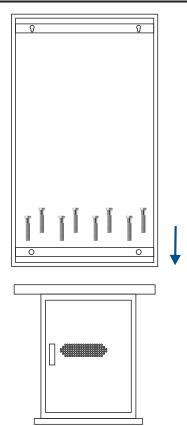



6. Once the entire structure is anchored, proceed to mount the screen. First, remove the two screws from the bottom. Then, with the help of two people, position the screen and secure it by anchoring the top with the two screws into the holes at the top of the structure, as shown in the image.

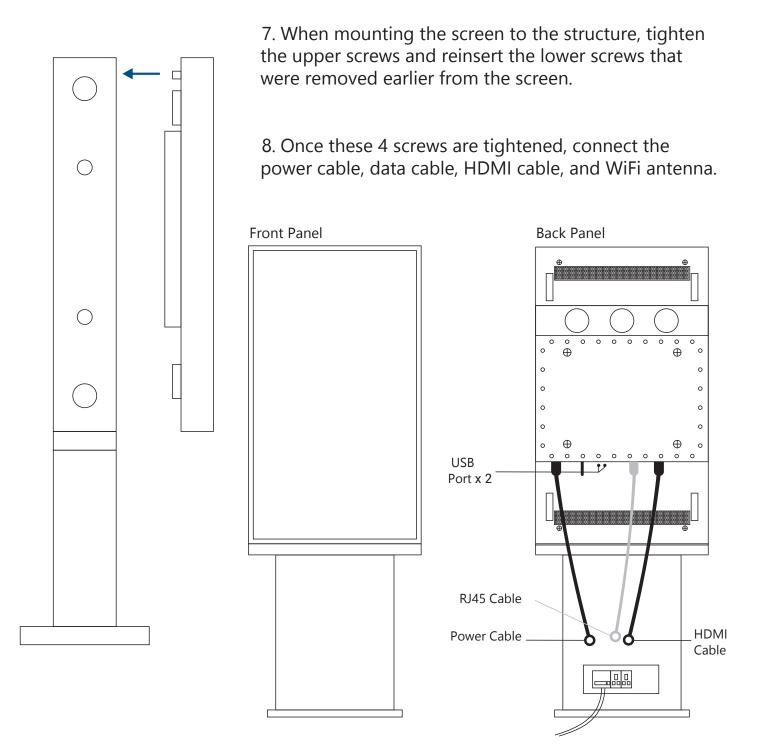



9. Finally, attach the rear cover and tighten the two screws at the top. Then, place the plugs on the structure and the base.

