BFL-IR-10W-20W-30W-5W_RGBCW-N

1

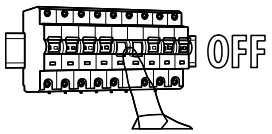

1. Disconnect the power supply

2

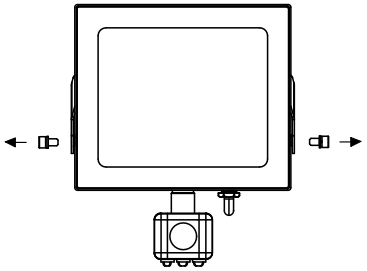

2. Loosen the bracket screws

3

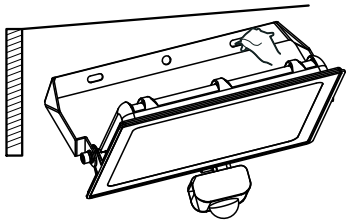

3. Determine the installation location

4

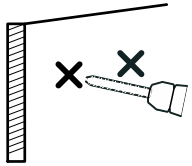

4. Drill holes into the building surface using a hammer drill

5

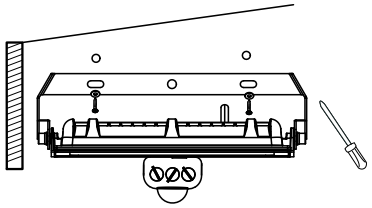

5. Secure the bracket with screws

6

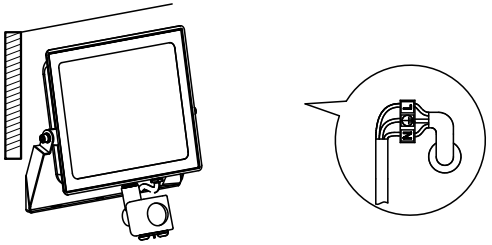

6. Connect the brown “L” wire to the live circuit, the blue wire to the “N” neutral circuit, and the yellow-green wire to the ground circuit. After connection, insulate and waterproof the joints using electrical tape and waterproof tape. Use a professional waterproof junction box.

7

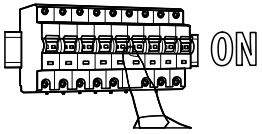

7. Turn on the power supply